

TVM

CONNECTOR FOR DECKING

FOUR VERSIONS



Different sizes for applications on boards with different thickness and gaps of varying width. Black version for complete concealment.

DURABILITY


The stainless steel ensures high corrosion-resistance. The micro-ventilation between the boards helps the durability of the wooden elements.

ASYMMETRIC GROOVING

Ideal for boards with asymmetrical "female-female" groove cuts. Ribbing on the surface of the connector ensures excellent stability.

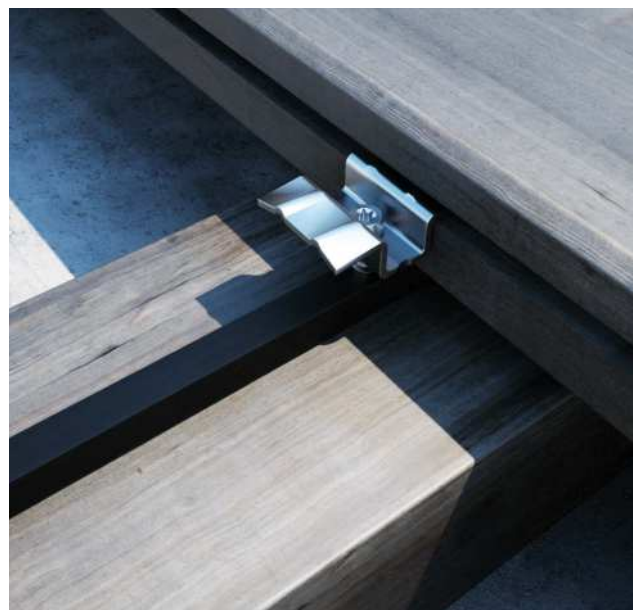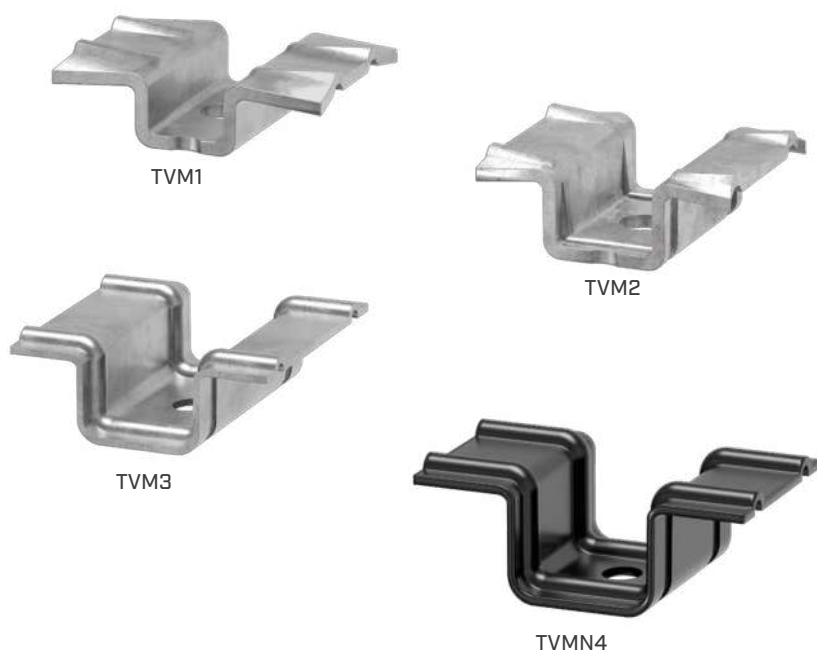

BOARDS

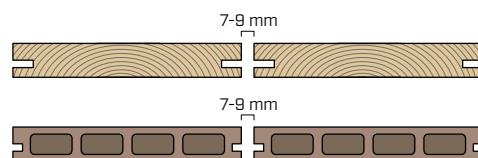

FASTENING ON



timber



WPC



aluminium

MATERIAL



A2 | AISI304 austenitic stainless steel (CRC II)



stainless steel with coloured organic coating



FIELDS OF USE

Use in aggressive outdoor environments. Fastening timber or WPC boards on substructures in wood, WPC or aluminium.

CODES AND DIMENSIONS

TVM A2 | AISI304

A2
AISI 304

CODE	material	P x B x s [mm]	pcs
TVM1	A2 AISI304	22,5 x 31 x 2,4	500
TVM2	A2 AISI304	22,5 x 28 x 2,4	500
TVM3	A2 AISI304	30 x 29,4 x 2,4	500

KKT X


fastening on timber and WPC for TVM A2 | AISI304



d ₁ [mm]	CODE	L [mm]	pcs
	KKTX520A4	20	200
5	KKTX525A4	25	200
TX 20	KKTX530A4	30	200
	KKTX540A4	40	100

KKA AISI410

fastening on aluminium for TVM A2 | AISI304



d ₁ [mm]	CODE	L [mm]	pcs
4	KKA420	20	200
TX 20	KKA420	20	200
5	KKA540	40	100
TX 25	KKA550	50	100

TVM COLOR

A2
AISI 304

CODE	material	P x B x s [mm]	pcs
TVMN4	A2 AISI304 with black coating	23 x 36 x 2,4	200

KKT COLOR

fastening on timber and WPC for TVM COLOR



d ₁ [mm]	CODE	L [mm]	pcs
5	KKTN540	40	200
TX 20	KKTN540	40	200

KKA COLOR




fastening on aluminium for TVM COLOR






d ₁ [mm]	CODE	L [mm]	pcs
4	KKAN420	20	200
TX 20	KKAN430	30	200
	KKAN440	40	200

GEOMETRY




TVM1

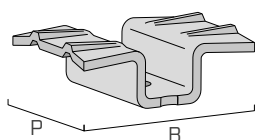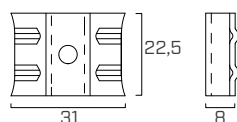




TVM2

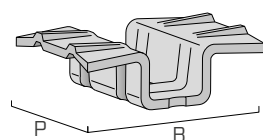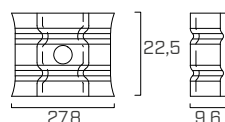

TVM3

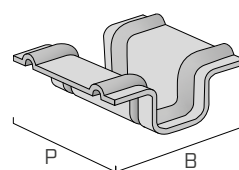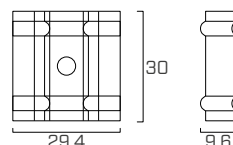


TVMN4

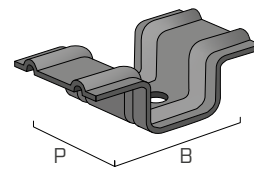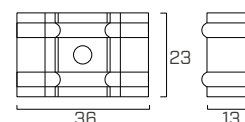

KKA

Can also be used for fastening on aluminium profiles using KKA AISI410 or KKA COLOR screws.


GROOVING GEOMETRY

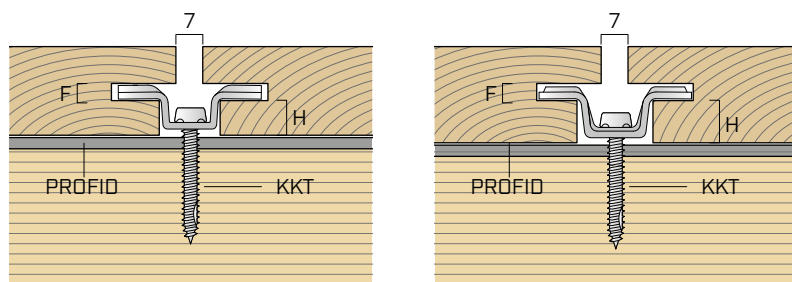


ASYMMETRICAL GROOVING

Min. thickness	F	3 mm
Min recommended height TVM1	H	7 mm
Min recommended height TVM2	H	9 mm
Min recommended height TVM3	H	10 mm
Min. recommended height TVMN	H	13 mm


INSTALLATION

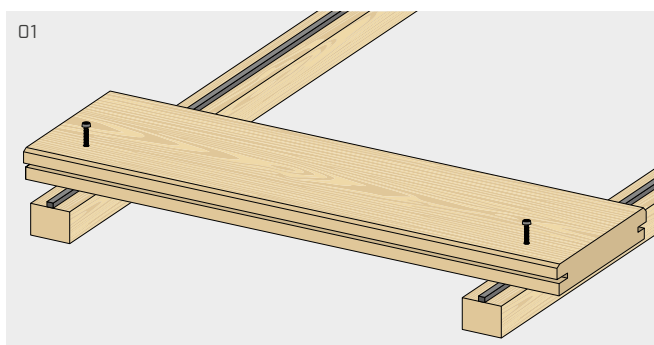


Position the PROFID spacer at the joist centerline. First board: fix with suitable screws which are left visible.

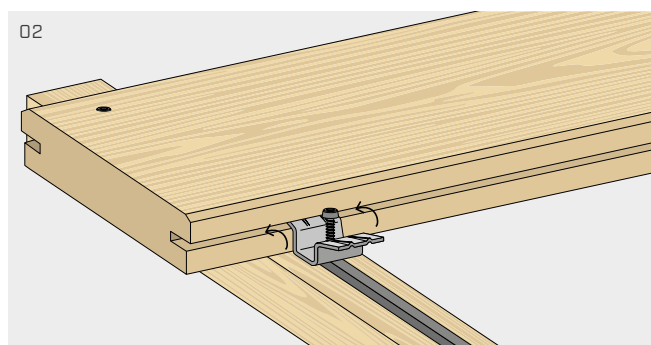


Insert the TVM fastener into the groove cut so that the side fin adheres to the groove in the board.

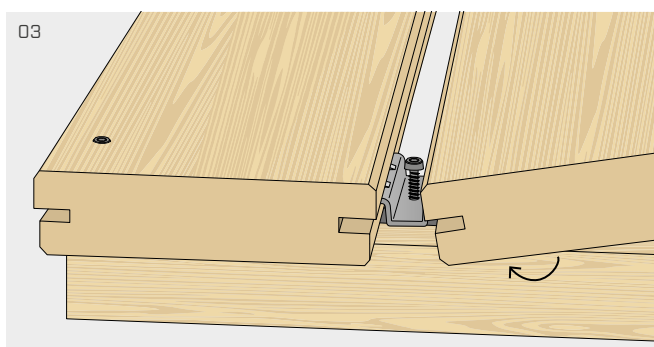


Position the next board by inserting it into the TVM fastener.

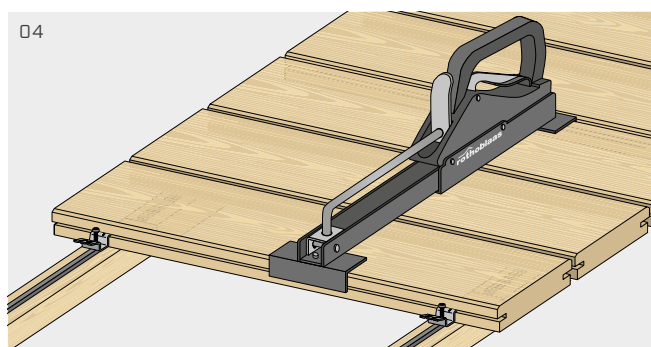

Using the CRAB MINI or CRAB MAXI clamp, tighten the two boards until the gap between them is 7 mm (see product page 395).

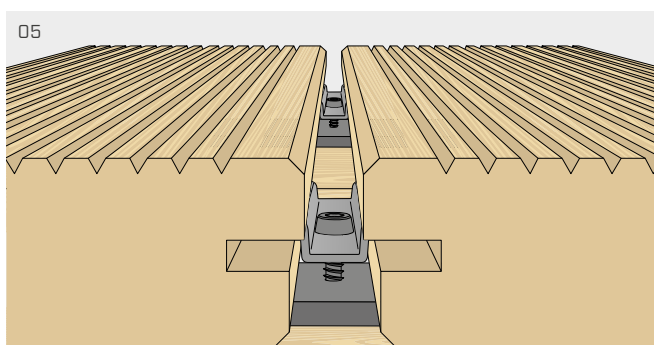


Fix the fastener to the batten underneath by using the KKT screw.

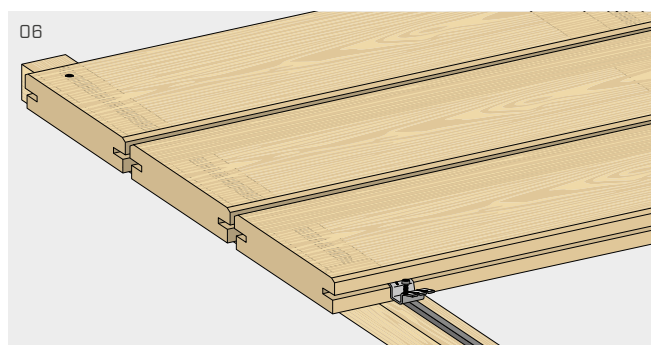

Repeat the operations for the remaining boards. Last board: repeat step 01.

CALCULATION EXAMPLE

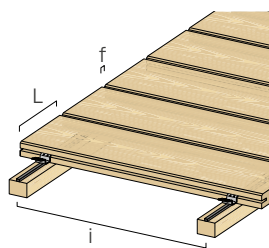

INCIDENCE ESTIMATE FORMULA PER m²

$$1\text{m}^2/i/(L + f) = \text{pcs of TVM at m}^2$$


i = battens spacing

L = board width

f = gap width

PRACTICAL EXAMPLE


NUMBER OF BOARDS AND BATTENS

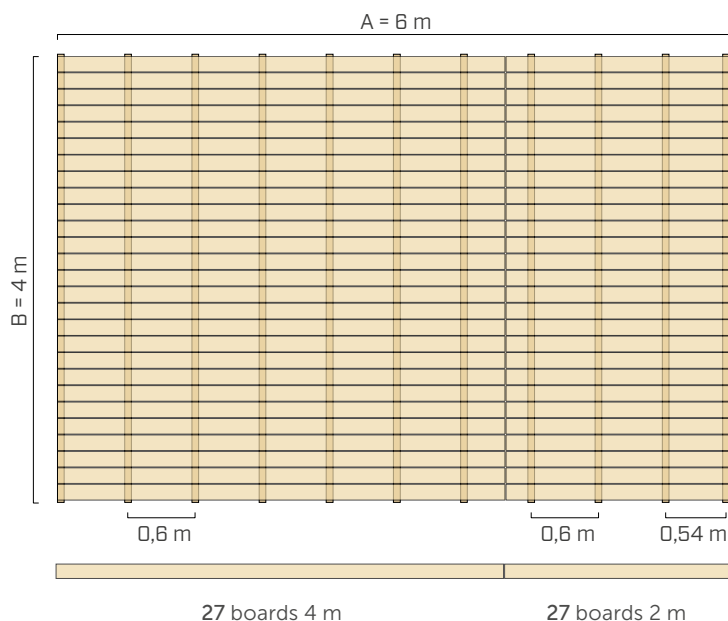

PATIO SURFACE

$$S = A \cdot B = 6 \text{ m} \cdot 4 \text{ m} = 24 \text{ m}^2$$

WOODEN PLANKING




L = 140 mm

s = 21 mm

f = 7 mm

BATTENS



b = 60 mm

h = 30 mm

i = 0,6 m


$$\begin{aligned} \text{no. boards} &= [B/(L+f)] \\ &= [4/(0,14+0,007)] = 27 \text{ boards} \end{aligned}$$

no. 4 m boards = 27 boards


no. 2 m boards = 27 boards

$$\text{no. battens} = [A/i] + 1 = (6/0,6) + 1 = 11 \text{ battens}$$

SCREW SELECTION

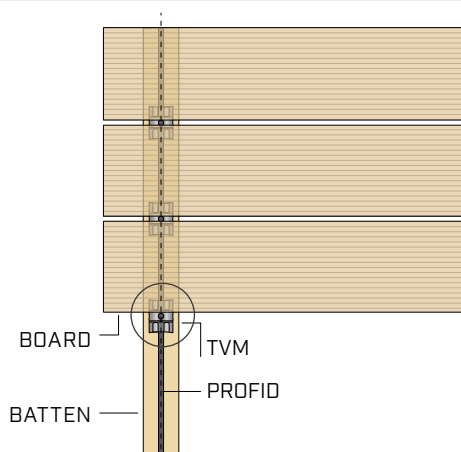

Screw head thickness	S _{screw head}	2,8 mm
Grooving thickness	F	4 mm
Grooving dimension	H	10 mm
PROFID thickness	S _{PROFID}	8 mm
Pull-through length	L _{pen}	4 · d
		20 mm

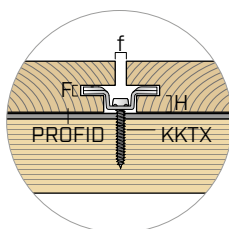

MINIMUM SCREW LENGTH

$$\begin{aligned} &= S_{\text{screw head}} + H + S_{\text{PROFID}} + L_{\text{pen}} \\ &= 2,8 + 10 + 8 + 20 = 40,8 \text{ mm} \end{aligned}$$

CHOICE OF SCREW

KKTX540A4

TVM NUMBER CALCULATION

QUANTITY FOR INCIDENCE FORMULA

$$I = S/i/(L + f) = \text{pcs of TVM}$$

$$I = 24 \text{ m}^2/0,6 \text{ m}/(0,14 \text{ m} + 0,007 \text{ m}) = 272 \text{ pcs TVM}$$

waste coefficient = 1,05

$$I = 272 \cdot 1,05 = 286 \text{ pcs TVM}$$

$$I = 286 \text{ pcs TVM}$$

TVM NUMBER = 286 pcs

QUANTITY FOR THE NUMBER OF INTERSECTIONS

$$I = \text{no. boards with TVM} \cdot \text{no. battens} = \text{pcs. of TVM}$$

$$\text{no. boards with TVM} = (\text{number of boards} - 1) = (27 - 1) = 26 \text{ boards}$$

$$\text{no. of battens} = (A/i) + 1 = (6/0,6) + 1 = 11 \text{ battens}$$

$$\text{no. intersections} = I = 26 \cdot 11 = 286 \text{ pcs TVM}$$

$$I = 286 \text{ pcs TVM}$$

SCREWS NUMBER = No. TVM = 286 pcs KKTX540A4